

**KONIX**



**DRAKKAR MIDGARD GAMING KEYBOARD**

USER MANUAL



## **FUNCTIONS :**

- Record shortcuts with five macro keys D1-D5
- 3 colors backlight inside the key
- Adjustable brightness and breathing effect
- Cable braided with a gold plated connector
- Windows Key lock
- Option to reverse the WASD and arrow keys
- Fast access to multimedia functions and key applications

## **PRODUCT SPECIFICATIONS :**

QWERTY standard layout 111 keys

3 color keycap backlighting (red/purple/blue)

Anti-ghosting on 26 keys

Compatible systems : Windows XP/Vista/7/8/10

Connection : USB plug & play

Dimensions : 512x210x32mm

Weight : 1080g

Cable length : 1.5 m


Power supply : DC 5.0V +- 0.5V, 80mA

Working temperature : -6°C à +46°C

Storage temperature : -20°C à +60°C

Touche Rec

Touches multimédia

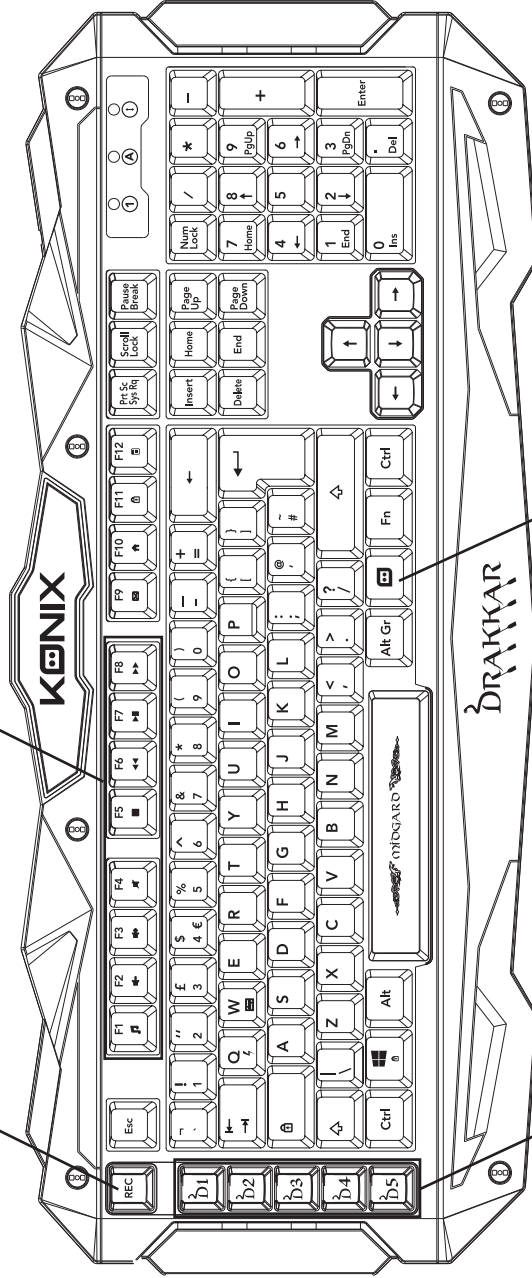

Touche Konix  réglage rétroéclairage

Touches D1 à D5 :  
touches macro programmables

## **MACROS RECORDING :**

1. Press the REC button to start recording: the LEDs flash slowly.
2. Select a macro key (D1-D5) to program: the LEDs flash rapidly.
3. Press up to 10 keys to create a unique macro combination.
4. Press REC again to finish recording.

- The maximum recording time is 30s, beyond this period, the recording is automatically canceled.
- Recording a macro with more than 10 keys will cancel it automatically.
- To delete a macro, press REC, the key to delete, and REC again.
- To delete all recorded macros and restore the factory settings, press Fn + REC and hold down 3s. The backlight flashes 10 times.

## **MULTIMEDIA SHORTCUTS :**

FUNCTION + F1: Media player

FUNCTION + F2: Volume -

FUNCTION + F3: Volume +

FUNCTION + F4: Mute

FUNCTION + F5: Stop

FUNCTION + F6: Previous

FUNCTION + F7: Play / Pause

FUNCTION + F8: Next

FUNCTION + F9: E-mail

FUNCTION + F10: Web browser

FUNCTION + F11: Keyboard lock

FUNCTION + F12: Calculator

## **SPECIAL FEATURES:**

- Press Fn + A to switch the response time of keys between 1/30s and 1/60s. The default is 1/60s.
- Press Fn + WIN-L to lock the WIN key
- Press Fn + Z to reverse the WASD and arrow keys.

## **MAINTENANCE AND SAFETY:**

- Don't dismantle this product and ensure no extreme pressure is placed on it.
- Keep away from heat sources such as radiators and heaters and keep this product dry.





©2016 Konix. Innelec Multimedia - Konix, 45 rue Delizy, 93692 Pantin Cedex, FRANCE. The Konix and Drakkar brands and logos are trademarks of Innelec Multimedia S.A. All other trademarks are the property of their respective owners. All rights reserved. Made in PRC.

