

# KONIX



**Double station de charge et batteries**  
pour manettes Xbox One™

**Dual Charge Base & Batteries Pack**  
for Xbox One™ controllers


Manuel de l'utilisateur / User manual

# Manuel de l'utilisateur

5

## Contenu :

- Double station de charge et batteries pour manettes Xbox One™ x 1
- Batterie rechargeable x 2
- Câble de charge USB x 1
- Manuel de l'utilisateur x 1

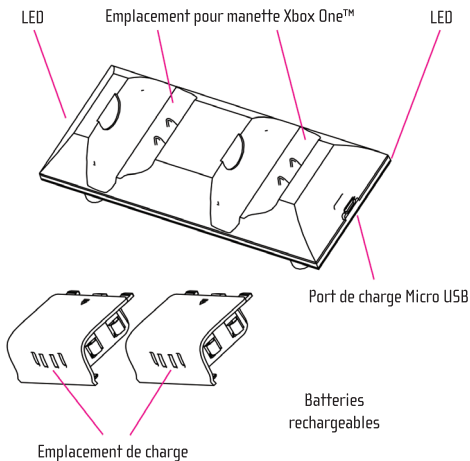

1  
1

2


## Spécifications :

- Rangez et chargez simultanément deux manettes Xbox One™
- Chargez sans retirer les batteries
- Caractéristiques LED rouge / verte pour vérifier l'état de charge
- Recharge rapide via votre console Xbox One™
- 2 batteries rechargeables incluses
- Manette sans fil Xbox One™ non incluse


## Instruction de fonctionnement :

### 1 . Branchez le câble USB à la console Xbox One™

Connectez la tête USB standard du câble au port USB de la console Xbox One. Connectez ensuite la tête du micro-USB du câble au port micro-USB situé l'arrière de la station de charge . Allumez la console ; le voyant sur la station de charge s'allume en vert.

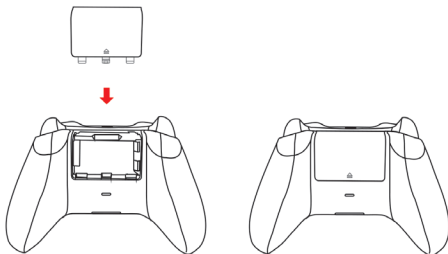

### 2 . Retirez le compartiment de la batterie de votre manette, puis glissez la batterie rechargeable dans le compartiment dédié.

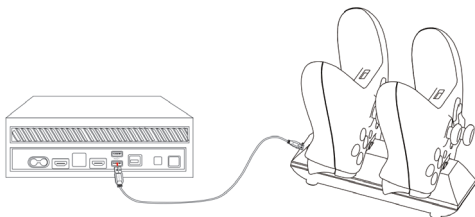

- 3 . Placez votre manette dans le compartiment du chargeur.
- 4 . La LED correspondante s'allumera en rouge au début de la charge et deviendra vert lorsque votre manette sera complètement chargée.

## PRÉCAUTION ET ENTRETIEN


1. S'il vous plaît assurez-vous qu'il n'ya pas de pression extrême mettre sur ce produit.
- 2 . Ne démontez pas ce produit sans autorisation.
- 3 . Ce produit doit être placé loin des sources de chaleur telles que des radiateurs et appareils de chauffage.
4. Gardez ce produit sec et éviter tout contact avec les zones humides ou mouillés.

Xbox One™ est une marque déposée ou des marques déposées de Microsoft Inc. Tous droits réservés; Toutes les autres marques sont la propriété de leurs propriétaires respectifs. Photos et illustrations non contractuelles. Le contenu, la conception et les spécifications sont sujets à changement sans préavis et peuvent varier d'un pays à l'autre. Ce produit n'est pas distribué sous licence officielle, sponsorisé ou approuvé par Microsoft Inc. Ce produit n'est pas fabriqué pour Microsoft Inc. Fabriqué en Chine.

# User manual

## Package Content:

- Xbox One™ Dual Controller Charging Station x 1
- Rechargeable Battery x 2
- USB Charging Cable x 1
- User Manual x 1

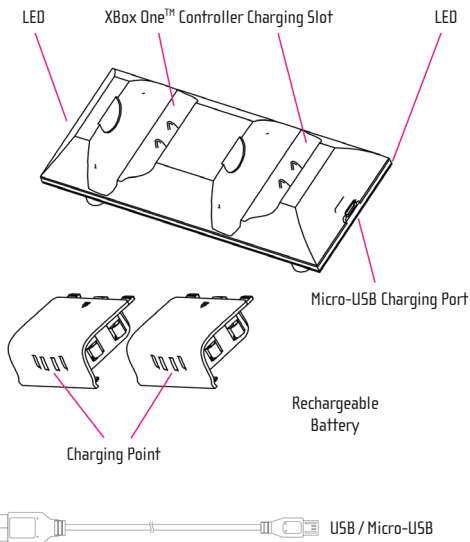


## Specification:

- Simultaneously store and charge two Xbox One™ controllers
- Charging without removing batteries
- Features red / green LED for charging status
- Fast charging via Xbox One™ console
- Including 2 high capacity rechargeable batteries
- Designed exclusively for Xbox One™ wireless controller
- Xbox One™ wireless controller not included


## Operation Instruction:

### 1 . Connect USB cable to Xbox One™ Console

Connect the standard USB head of the cable to the USB port on the Xbox One™ Console. Then connect the micro USB head of the cable to the micro USB port at the back of the charge station. Turn on the console and the LED on the charge station will turn GREEN.

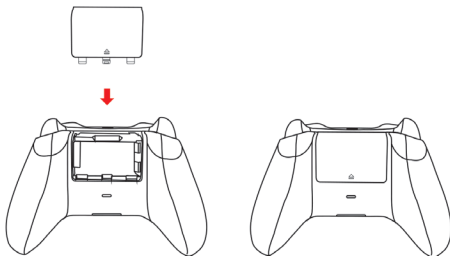

### 2 . Remove the battery cover of Xbox One™ controller, then slide the rechargeable battery into the battery bay.

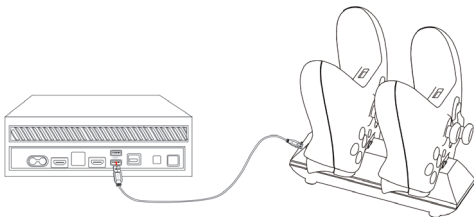

- 3 . Well place the Xbox One™ controller into the charging slot.
- 4 . The corresponding LED will turn RED when start charging, and the LED will turn GREEN when fully charged.

## PRECAUTION AND MAINTENANCE

1. Please make sure there is no extreme pressure put on this product.
- 2 . Don't dismantle this product without permission.
- 3 . This product should be situated away from heat sources such as radiators and heaters.
4. Keep this product dry and avoid any contact with damp or wet areas.

Xbox One™ is registered trademark or trademarks of Microsoft Inc. All Rights reserved; All other trademarks are property of their respective owners. Photos and illustrations not binding. Contents, designs and specifications are subject to change without notice and may vary from one country to another. This product is not distributed under official license from or approved, sponsored or endorsed by Microsoft Inc. This product is not manufactured for Microsoft Inc. Made in China.

The logo for Konix features the word "KONIX" in a bold, black, sans-serif font. The letter "O" is replaced by a square icon containing two small black circles, resembling a stylized face or a camera lens.

**KONIX**

[www.konix-interactive.com](http://www.konix-interactive.com)