

KONIX



Double station de charge
pour manette Playstation 4™

Dual Charge Base
for Playstation 4™ Controllers


Manuel de l'utilisateur / User manual

Manuel de l'utilisateur

5

Contenu :

- Double station de charge pour manette PS4™ x 1
- Câble Y de charge USB x 1
- Manuel de l'utilisateur x 1

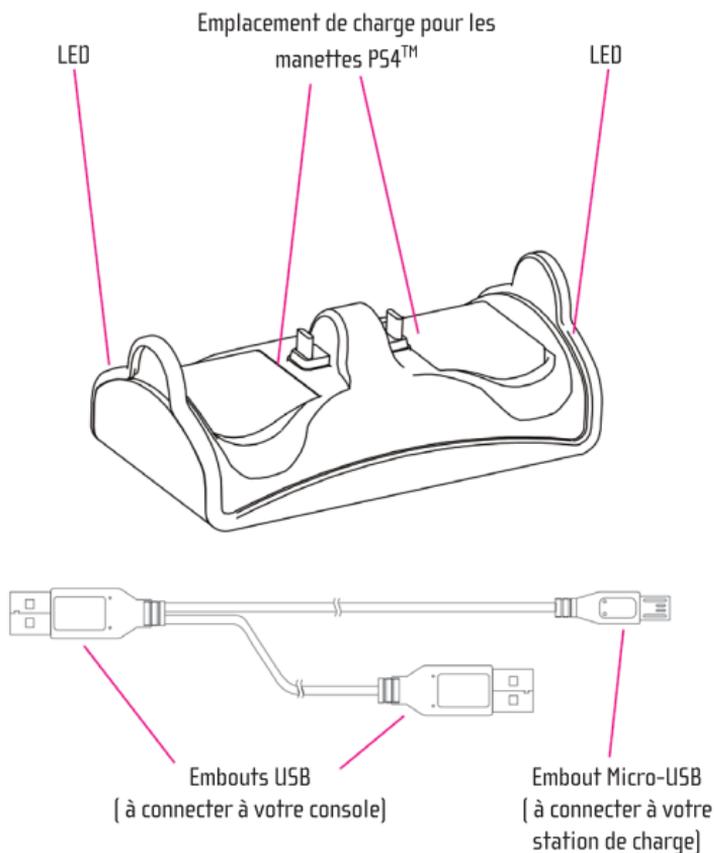

1

1

2

Spécifications :

- Stockez et chargez simultanément deux manettes Playstation 4™
- Caractéristiques LED rouge / bleu pour informer de l'état de charge
- Recharge rapide via votre console PS4™
- Câble de charge USB permettant une charge rapide
- Finition Jet Black pour une harmonisation avec votre PlayStation 4™
- Manettes pour PlayStation 4™ non incluses


Instructions de fonctionnement :


1. Branchez le câble USB à votre console PS4™.

Connectez les embouts USB au port USB à l'avant de la console PS4™.

Connectez ensuite la tête du câble micro-USB au port micro-USB situé à l'arrière de la station de charge. Allumez la console et le LED de votre station de charge deviendra bleu.

2. Placez correctement la manette dans son emplacement de charge.

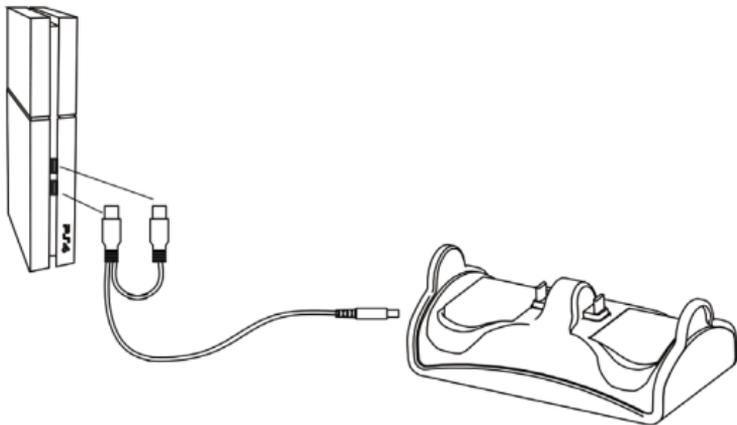

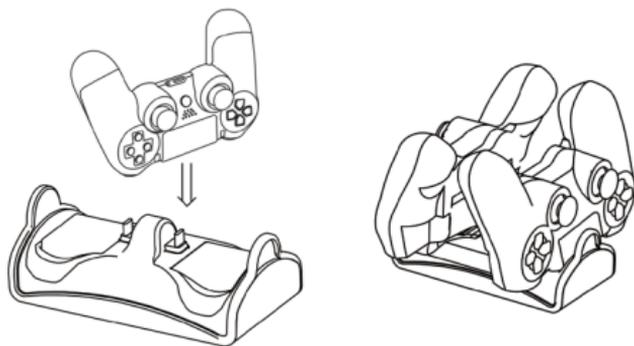

3 . La LED deviendra rouge lorsque la charge démarrera et se changera en bleue une fois complétée.

PRÉCAUTION ET ENTRETIEN


1. Assurez-vous qu'il n'y ait pas de pression extrême sur ce produit
- 2 . Ne démontez pas ce produit sans autorisation.
- 3 . Ce produit doit être placé loin des sources de chaleur telles que les radiateurs et chauffages
4. Gardez ce produit sec et éviter tout contact avec les zones humides ou mouillées.

PlayStation 4™ est une marque commerciale ou des marques déposées de Sony Computer Entertainment Inc. Tous droits réservés, toutes les autres marques sont la propriété de leurs propriétaires respectifs. Photos et illustrations non contractuelles. Le contenu, la conception et les spécifications sont sujets à changement sans préavis et peuvent varier d'un pays à l'autre. Ce produit n'est pas distribué sous licence officielle ou conçu, sponsorisé ou approuvé par Sony Computer Entertainment Inc. Ce produit n'est pas fabriqué pour Sony Computer Entertainment Inc. Fabriqué en Chine.

User manual

Package Content:

- Dual Controller Charging Station x 1
- USB Y Charging Cable x 1
- User Manual x 1

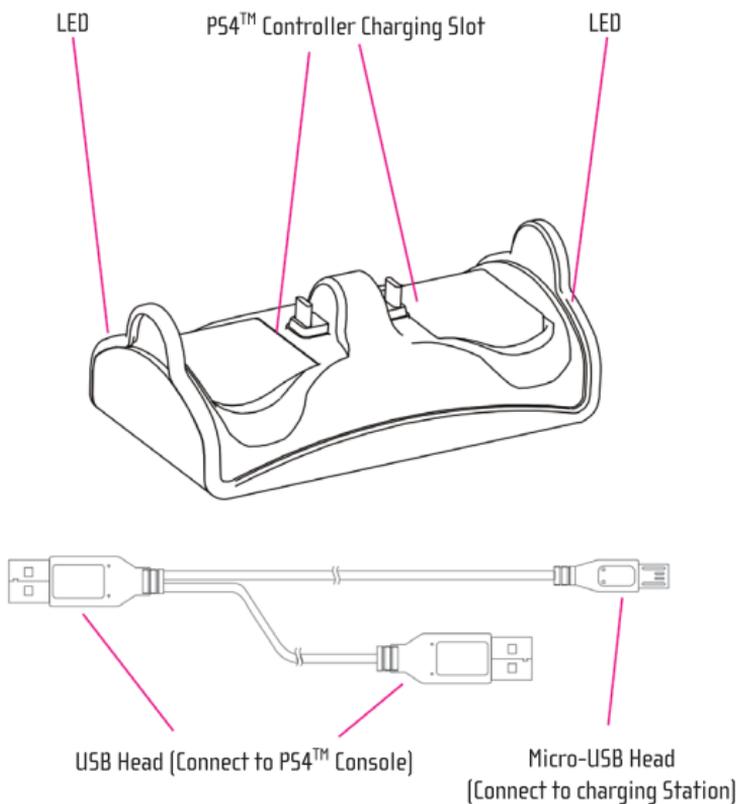

Specification:


- Simultaneously store and charge two PS4™ controllers
- Features red / blue LED for charging status
- Fast charging via PS4™ console
- Unique Y USB cable support speeding charge
- Jet black finish to match PlayStation 4™ console
- PlayStation 4™ controllers not included

Operation Instruction:

1. Connect USB Cable to PS4™ Game Console

Connect the two standard USB head of the Y cable to the USB port at the front of the PS4™ console. Then connect the micro USB head of the cable to the micro USB port at the back of the charge station. Turn on the console and the LED on the charge station will turn BLUE.

2. Well place the PS4™ controller into the charging slot.

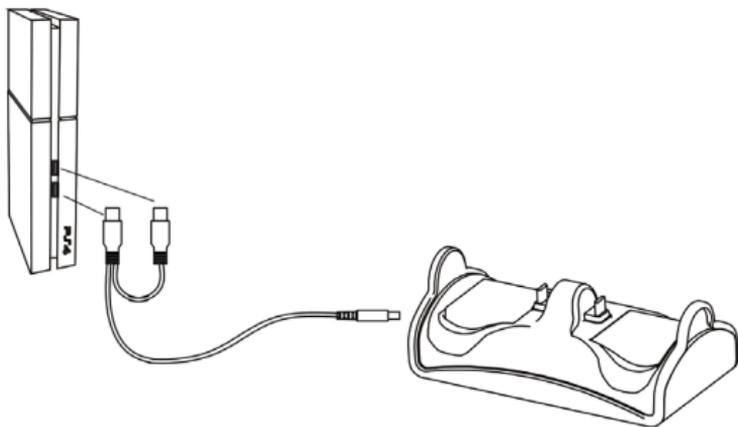

3


1

2

3

4

P
A
i
l
n
l
i
P

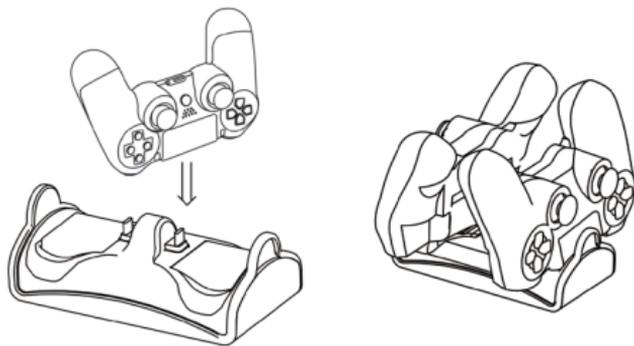

- 3 . The corresponding LED will turn RED when start charging, and the LED will turn BLUE when fully charged.

PRECAUTION AND MAINTENANCE

1. Please make sure there is no extreme pressure put on this product.
- 2 . Don't dismantle this product without permission.
- 3 . This product should be situated away from heat sources such as radiators and heaters.
4. Keep this product dry and avoid any contact with damp or wet areas.

PlayStation 4™ is registered trademark or trademarks of Sony Computer Entertainment Inc. All Rights reserved; All other trademarks are property of their respective owners. Photos and illustrations not binding. Contents, designs and specifications are subject to change without notice and may vary from one country to another. This product is not distributed under official license from or approved, sponsored or endorsed by Sony Computer Entertainment Inc. This product is not manufactured for Sony Computer Entertainment Inc. Made in China.

The logo for Konix features the word "KONIX" in a bold, black, sans-serif font. The letter "O" is replaced by a square icon containing two small black circles, resembling a stylized face or a camera lens.

KONIX

www.konix-interactive.com